



SETTING UP THE FALCON TO WORK WITH A TEXECOM PREMIER PANEL

CONNECTING THE FALCON TO THE PANEL

NB. Make sure that the Falcon unit has a firmware version of **4.13** or later.
For the Falcon to send signals to the control room while using the app, you have to connect it via Tip and Ring as well as via the Com Port.

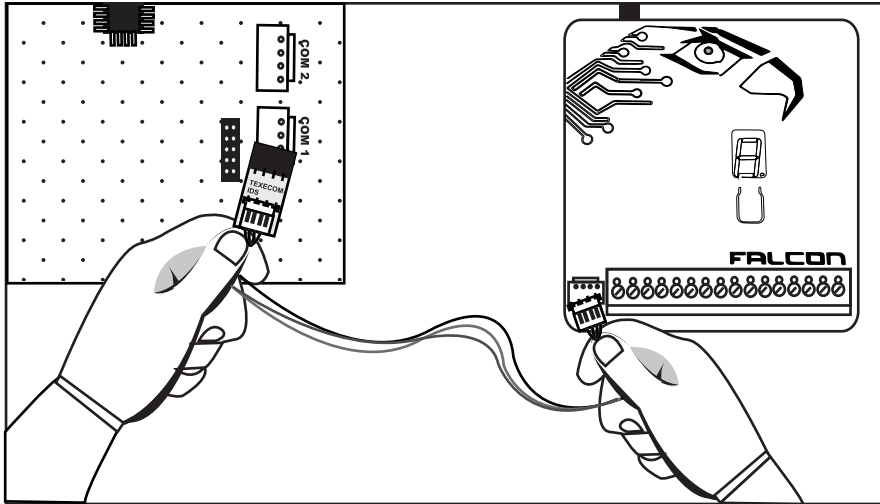


1. Connect the Falcon to the Texecom panel through the serial port (COM 1) using the serial cable and adapter marked "TEXECOM-IDS" provided. Note that the adapter **must** be connected to the panel's serial port.

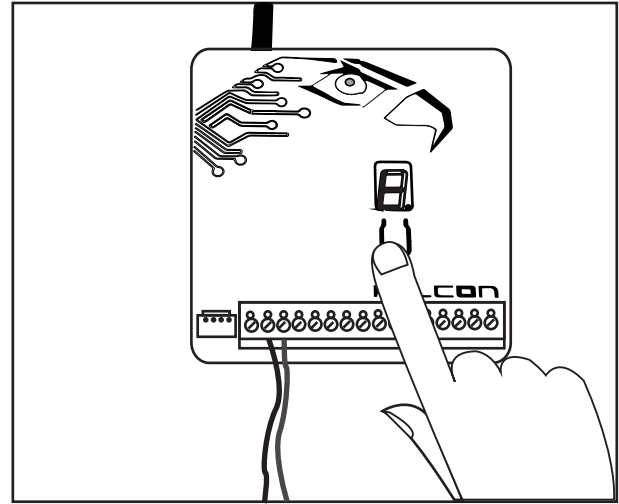


2. Set the serial port format on the Falcon unit to Texecom. To do this, remove power from the Falcon, hold down the push-button and re-apply power. Push the button to cycle through the panel serial port format options until you reach the Texecom format, indicated by a small letter "t". Release button. The Falcon will remember the new serial port format.


PROGRAMMING THE PANEL TO SEND SIGNALS VIA TIP AND RING

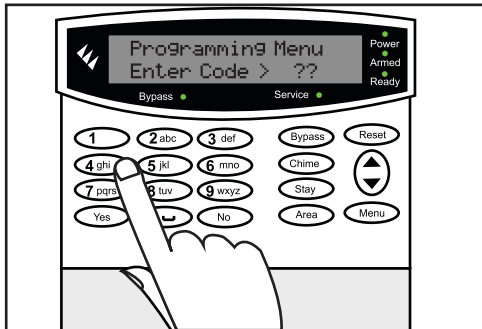

1. On the Texecom panel, enter the programming mode by entering the engineer code (default 1234), followed by [Menu] then [9].

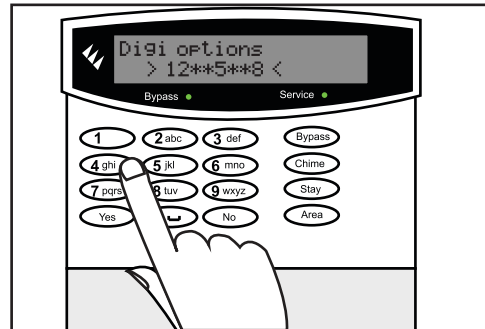


2. Enter [70] and make sure that the Digi options 1,2,5 and 8 are enabled. Press [Yes] to save and press [Menu] to return to the home screen of the Programming Menu.

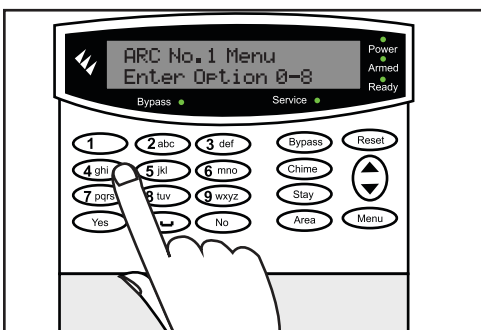

Press [71] to access Menu 71 and program the following settings:


- Press [0]. Enter [22] and press [Yes] to save.
- Press [1]. Enter [3456] as the account code and press [Yes] to save.
- Press [2]. Enter [4] to set the protocol type to Contact ID.
- Press [3]. Enter [1] to set the dialer attempts to 1.
- Press [4]. Enable desired partitions and press [Yes] to save.
- Press [5]. Enable all report events and press [Yes] to save.
- Press [8]. Make sure that option 8 (connect via IP) is disabled and press [Yes] to save.
- Press [Menu] to return to the home screen of the Programming Menu.

PROGRAMMING THE PANEL TO WORK WITH THE FALCON APP

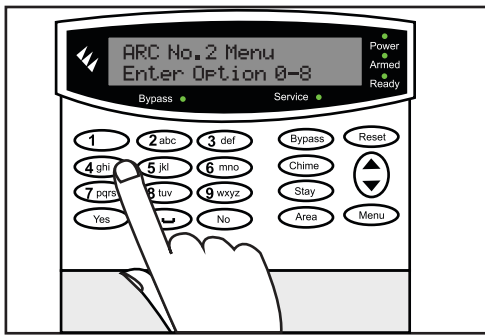

Press [72] to access Menu 72 and program the following settings:

- Press [0]. Ensure that no telephone number is programmed and press [Yes] to save.
- Press [1]. Enter [3456] as the account code and press [Yes] to save.
- Press [2]. Enter [4] to set the protocol type to Contact ID.
- Press [4]. Enable all partitions and press [Yes] to save.
- Press [5]. Disable all report events and press [Yes] to save.
- Press [8]. Make sure that option 8 (connect via IP) is enabled and press [Yes] to save.
- Press [Menu] to return to the home screen of the Programming Menu.

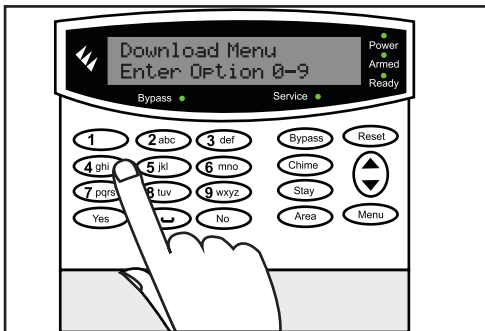

Press [76] to access Menu 76 and program the following settings:

- Press [2]. Enter the pin code to be used for arming and disarming the panel and press [Yes] to save.
- Press [5]. Enter [3] to set COM 1 to COM-IP device type for app connection.
- Press [Menu] and then [99] to exit the Programming Menu.



Once you have completed the programming above proceed to download the MiRhino app as per the MiRhino Quick Guide provided